

HARKEN®

INSTALLATION SHEET

Battcar with SDA Fitting


1825, 1826, 1827, 1825HL, 1826HL, 1827HL

N15W24983 Bluemound Rd • Pewaukee, WI 53072-4974 USA.


Tel: (262) 691-3320 • Fax: (262) 701-5780

Web: harken.com • Email: harken@harken.com

SDA fitting must be modified to allow a 105° rotation on both sides.

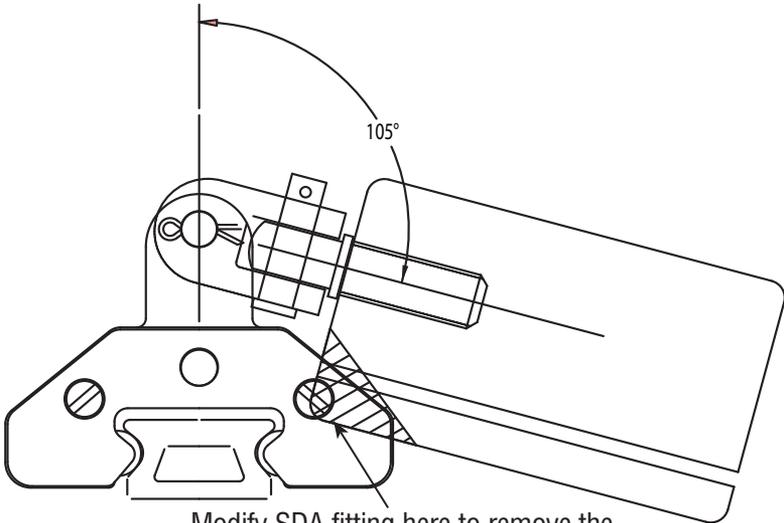

Modify SDA fitting here to remove the shaded area to allow fitting to rotate 105°.

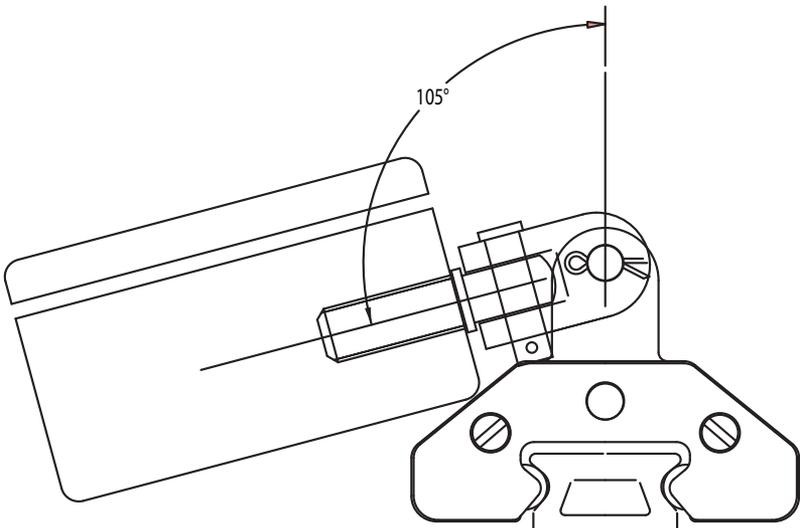

Inspect

Frequently inspect shackles and control block fittings for signs of fatigue and replace as necessary. Make sure every installation includes Harken track end stops. Arrange control tackle so cars do not hit end stops under load.

Maintenance

Traveler Cars: Clean by frequently flushing with fresh water. Periodically clean car by squirting a detergent/water solution into center openings. Roll car back and forth to distribute evenly then flush bearings with fresh water.

Do not use spray lubricants because ball bearings may skid not roll. Apply one to two drops of McLube® OneDrop™ to ball contact surfaces of track. Roll car back and forth through OneDrop™ several times to distribute onto bearings. Wipe remaining OneDrop™ off track. OneDrop™ is preferred but you can also use one to two drops of a light machine oil. Too much oil attracts dirt.

Track: Clean with detergent and water.

Important! Exposure to some teak cleaners and other caustic solutions can result in discoloration of part and is not covered under the Harken warranty.



Warranty

For additional safety, maintenance and warranty information see www.harken.com/manuals or the Harken® catalog.